

SPACETEK

STEALTH MOUNT

Quick Start Guide

SPACETEK

GREN



Protected



Secure




Australian Made

WHAT'S INCLUDED

STEALTH MOUNT WITH SECURITY BOLTS

Stealth Mount assembly with supplied security bolts.

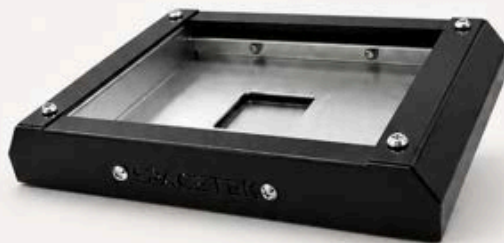

SECURITY KEY

Supplied key for the security bolts.



UV-STABLE ACRYLIC COVER

Protective acrylic cover.



Mounting hardware varies between roof rack systems and is not included. To ensure adequate clearance inside the mounting cradle, bolt heads must not exceed 5mm in height.

BEFORE YOU BEGIN



KEEP YOUR SECURITY KEY SAFE

The supplied security key is required to loosen and tighten the specialised security bolts used throughout the Stealth Mount. Keep it in a safe place. Without this key, You may not be able to disassemble, adjust or re-secure the mount

Replacement key can be purchased online.

CHOOSE YOUR INSTALLATION METHOD

OPTION 1

ROOF RACK INSTALLATION



OPTION 2

MAGNETIC INSTALLATION

Compatible magnets are purchased separately.




INSTALLATION CHECKLIST

- ✓ Choose the correct installation method for your vehicle.
- ✓ Keep the supplied security key accessible during the installation.
- ✓ Confirm your mounting surface and hardware are suitable before driving.

ROOF RACK INSTALLATION

Follow these steps to securely install your Stealth Mount to your rack.

STEP 1

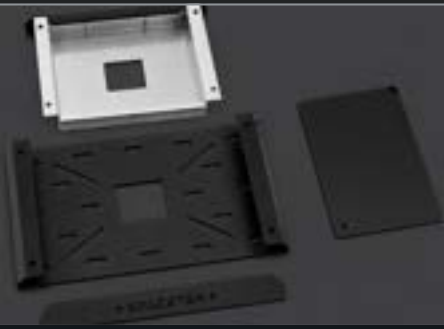

Disassemble the mount - remove the retaining panels to prepare for assembly.

STEP 2



Secure the mount using hardware appropriate for your roof rack.

STEP 3



Insert the Starlink Mini into the mount cradle.

STEP 4



Connect the cable to the Starlink Mini.

STEP 5



Slot in the cradle assembly into the magnetic mount base. Feed cable through.

STEP 6



Slide in the acrylic cover over the Starlink Mini.

STEP 7



Assemble the final panel.

STEP 8



Tighten all bolts evenly (don't over tighten).




FINAL INSPECTION:

Verify that all screws are secure and all components are properly installed before driving.

MAGNETIC INSTALLATION

For use with compatible magnets purchased separately.

STEP 1

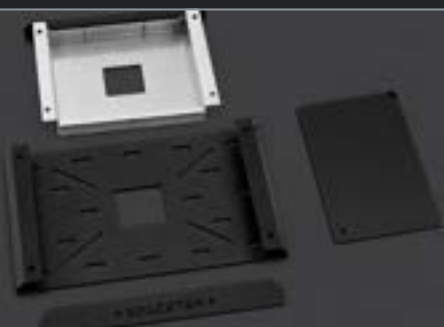

Disassemble the mount - remove the retaining panels to prepare for assembly.

STEP 2



Fasten one compatible magnet to each corner of the mount base. Note: you may need multiple washers.

STEP 3



Insert the Starlink Mini into the mount cradle.

STEP 4



Connect the cable to the Starlink Mini.

STEP 5



Slot in the cradle assembly into the magnetic mount base. Feed cable through.

STEP 6



Slide in the acrylic cover over the Starlink Mini.

STEP 7



Assemble the final panel and tighten all bolts evenly (don't over tighten).

STEP 8



Position the magnetic mount on the vehicle surface.



SAFETY CHECK:

Always ensure the mounting surface is suitable, clean and capable of securely holding the magnetic mount before driving.

SPACETEK

BUILT FOR LIFE ON THE ROAD



AUSTALIAN MADE

Design and manufactured in Australia using powder coated aluminium.



PROTECTIVE COVER

Helps shield your Starlink Mini from stones, debris and harsh conditions



LOW PROFILE DESIGN

A cleaner, more integrated installation that looks at home on modern touring vehicles.



SECURITY HARDWARE

Specialised security bolts help secure the mount and require the supplied security key



NEED HELP?



Scan the QR code or visit
help.spacetek.com.au
for installation tips, FAQs
and support



<https://www.spacetek.com.au>

THANK YOU FOR CHOOSING SPACETEK.

DESIGN AND MANUFACTURED IN AUSTRALIA.